

Installation Guide

1. Positioning




View our guides
and tips online at
tykite.com

Taping one side of the graphic is useful when the sides are of similar length.



View our guides and tips online at tykite.com

This method works good when applying strips of text. You would start at the middle and apply each side separately.

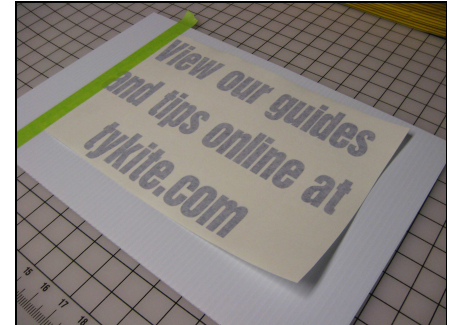


The above graphic is aligned and ready to be installed.

2. Remove Backing



The backing must be removed before squeegeeing.

3. Squeegeeing the Graphic

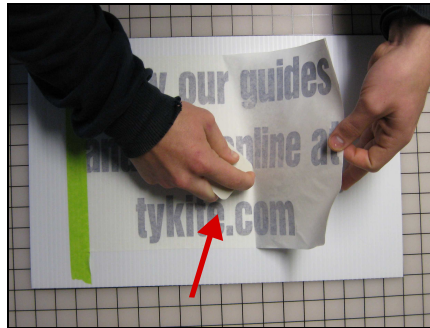

Correctly squeegeeing your graphic is critical to the finished product.



Holding the squeegee at a 45° angle to the substrate helps prevent bubbles and wrinkles.

4. Remove Masking



The masking or application tape can then be removed to reveal the finished product.



Completely installed graphic.

Tips

- Use correct pressure. Too little will leave bubbles while too much will rip the masking.
- Be sure to correctly align the graphic by measuring from a straight line on the graphic to one on the substrate before taping.
- It may be necessary to re-squeegee with more pressure to ensure adhesion.